



Panel Integration

Galaxy Flex 20, 50, 100
Panel Firmware Vr 1 & 2

Galaxy Flex 20, 50, 100
Panel Firmware Vr 3
(MCM – Connection Only)

Modem Capture Connectivity

Connect the A and B 'PSTN' terminals and ground on the WebWay to the A and B telephone connections on the alarm panel. Connect the WebWay PWR + and - to any relevant Power and Ground terminals.

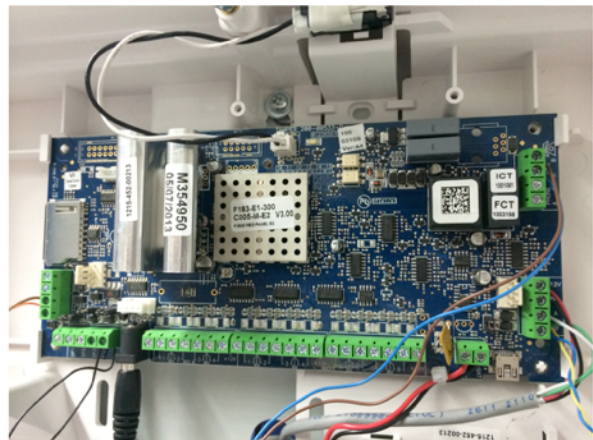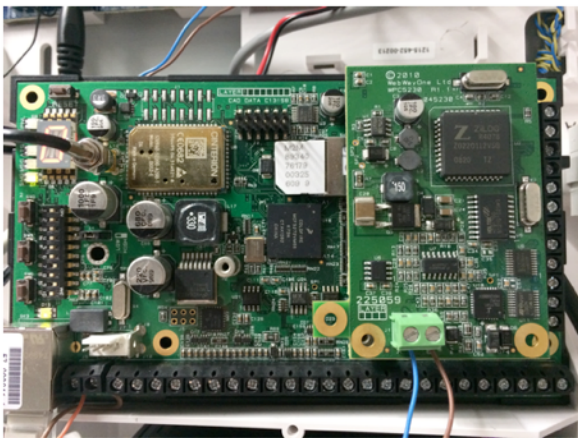

Go to: Menu 56 - Communications

Select: 1 – ARC Notify (Menu 1)

Press Enter

Select: 1 – Receivers

Press Enter

Select: 1- Receivers 1

Press Enter

Select: 1- PSTN

Press Enter

Select: 1- Destination

Press Enter

Select: Phone Number

Enter <01234567890>

Select: Format

Select: SIA

Select: <Level 3> <(0-4)>

Press Enter

Use escape to return to Engineer Mode.